


This procedure show how replace electronic board of change motor rotation, with mechanical timer.

Step 1) Remove wires indicated with letters from electronic board as shown in figure 1, and replace them on mechanical timer as shown in figure 2 .

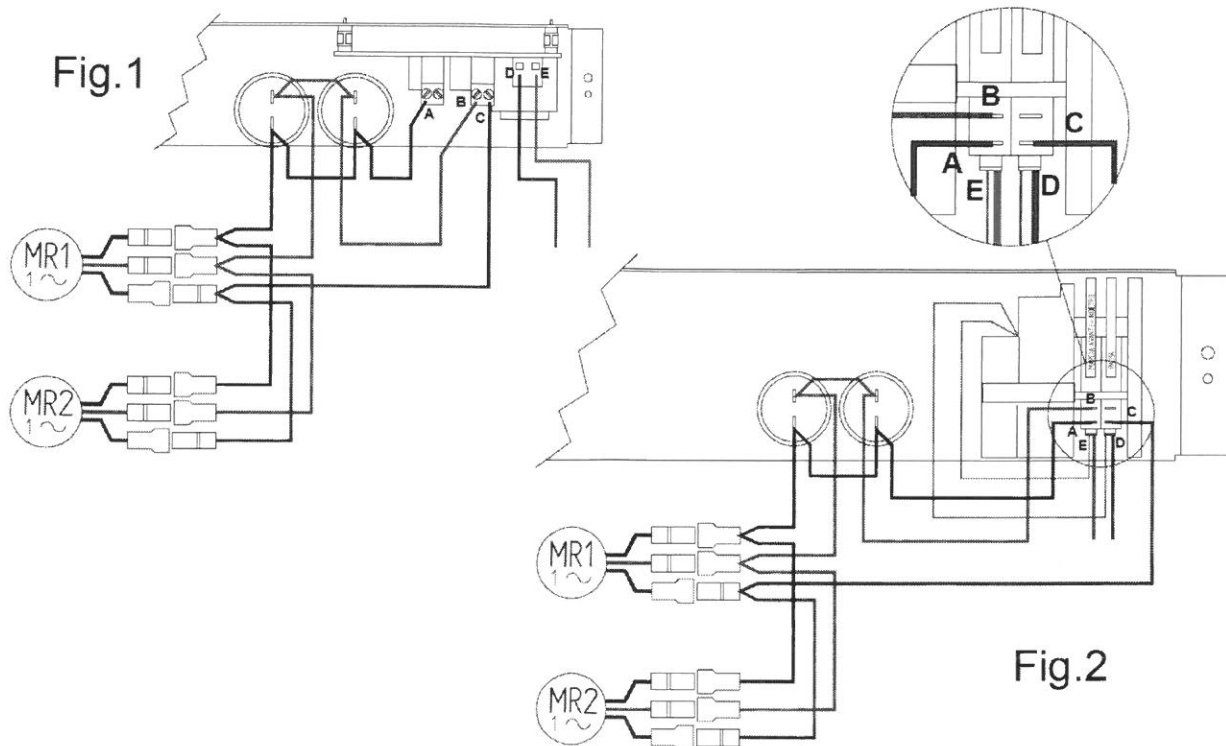

Step 2) At the end turn on the oven, run a cooking cycle and be sure that motors change directions.