

Works instruction

Adjustable CAM timer

Effective from : 16.12.2009
Machine(s) effected : Under counter

Document :
WI-PROD-115



Step	Action	Picture	
1	Make a note of the wire positions on the existing timer		
2	Now replace timer with new adjustable version		
3	Now place all the wires on to the New adjustable timer, in the same position as per the original timer		
4	<p>ONLY at CAM 4, move the following 2 wires over</p> <p>Wire with the RED crimp cover is now to go on the middle row</p> <p>Wire with the BLACK crimp cover is now to go on the top row.</p> <p>This is due to the profile of CAM 4 is inverted to the original timer you have removed</p>	<p>CAM 4 should now have the following wires</p> <p>BLACK crimp cover (top row)</p> <p>RED crimp cover (middle row)</p> <p>White crimp cover (bottom row)</p>	
5	To adjust the rinse time, use the plastic driver provided	<p>✚ Increase rinse , enlarge the gap in CAM 4</p> <p>✚ Decrease rinse, reduce the gap in CAM 4</p>	
6	Defaults to give 3 - 3.5 litre rinse volume		
	MACHINE	Timer Type	Set Cam
	Eco 1 / 2 / 3	2 Minute	22.5 mm
	Hydro 500 / 700 / 750	3 Minute	17mm
	Duo 500	3 Minute	12.5mm
	Duo 2	2 Minute	20mm
	Duo 3	2 Minute	15mm
	DUO 750	3 Minute	8mm