

CE Installation instructions



AKO-D14112 **AKO-D14212** **AKO-D14312**
AKO-D14123-2 **AKO-14220** **AKO-D14223**
AKO-D14320 **AKO-D14323**


1- Warnings

- Using the equipment without following the manufacturer's instructions may affect the device's safety requirements. To ensure that the device operates correctly, only probes supplied by AKO should be used.
- The unit must be installed in a location protected from vibrations, water and corrosive gases, where the ambient temperature does not exceed that shown in the technical data.
- To ensure a correct reading, the probe must be situated in a location without any external heat influences except for the temperature which is being measured or controlled.
- The power supply circuit must be provided with a main switch rated at at least 2 A, 230 V, located close to the equipment. The cables will enter through the back and should be type H05VV-F or H05V-K.
- The gauge will depend on local regulations, but should in no case be less than 1 mm².
- Connecting wires for the relay contacts should be sized 2.5 mm².
- Between -40 °C and +20 °C, if the probe NTC is prolonged till 1.000 m with a minimum of cable 0,5 mm², the maximum deviation will be of 0,25 °C (extension cable for probe ref. AKO-15586)


NOTE: Equipment not compatible with AKO-14917 (external communication module) and AKO-14918 (programming key)

3- Wiring

The probe and its cable should **NEVER** be installed in the same conduit as power, control or supply cables.

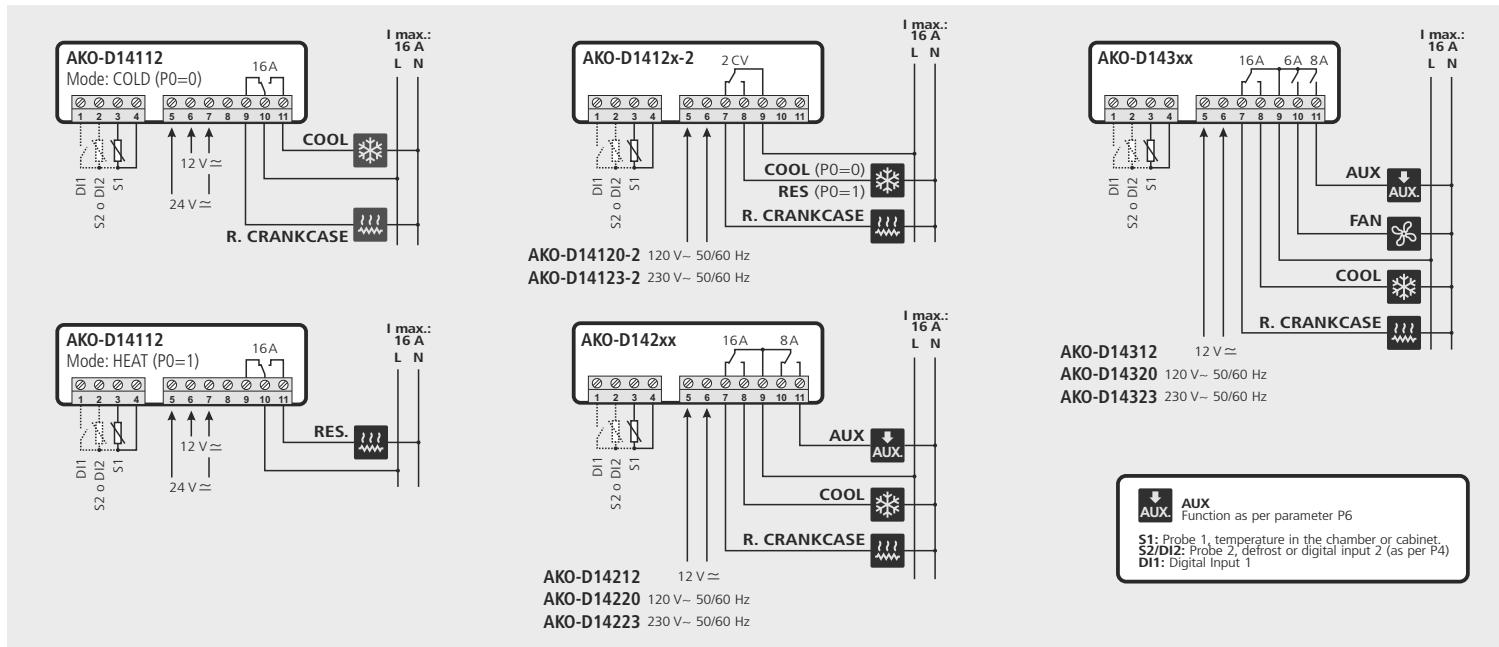

4- Operation

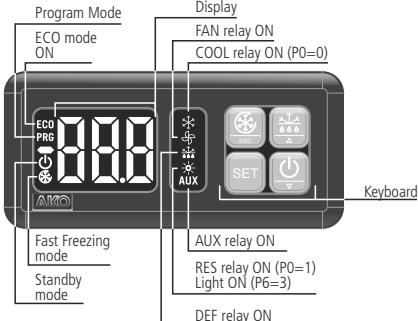

ESC key /

Press for 5 seconds to start/stop Fast Freezing mode (rapid cooling).

In the programming menu, exit without saving parameter, return to previous level or exit programming.

SET key

Press for 5 seconds to modify the set point (SP).

Press for 10 seconds to go to the programming menu.

In the programming menu, go to the level displayed or accept the new value while setting a parameter.

Up key

Pressing for 5 seconds starts/stops defrosting.


The programming menu, allows you to scroll through the various levels or, during the setting of a parameter, to change the value.

Down key /


Pressing for 5 seconds activates Standby mode, pressing for 2 seconds returns the equipment to normal mode. In Standby mode, the equipment performs no actions and only the indicator is displayed on the screen.

The programming menu, allows you to scroll through the various levels or, during the setting of a parameter, to change the value.


4.1- Access to set point and programming

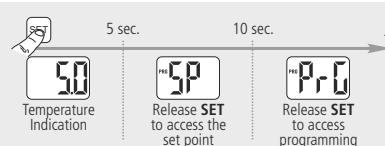


Change set point (SP)

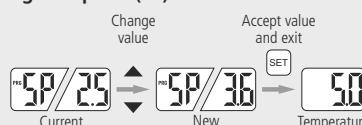

Programming Menu (parameters)

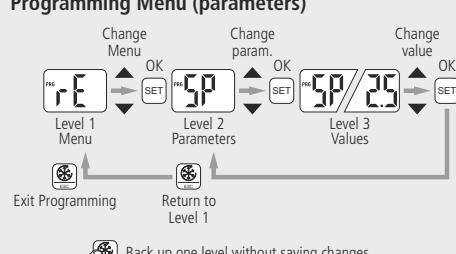

2- Installation

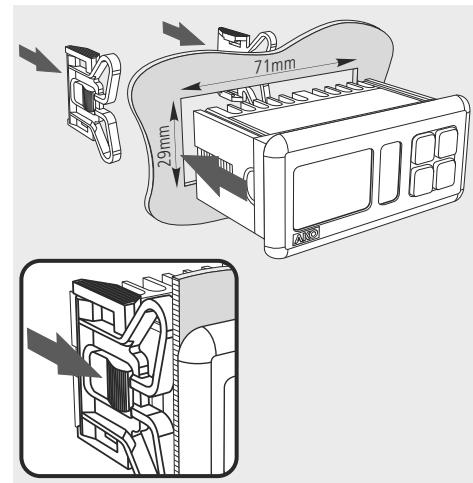

5- Start-up

On power-up, the equipment will start up in Wizard mode (Inl / 1 flashing), press or to select the most appropriate application and press **SET**.

- | | | |
|-----------------|----------------------|--------------------------|
| 1: Multipurpose | 2: Frozen | 3: Fruits and vegetables |
| 4: Fresh fish | 5: Soft Drinks | 6: Bottle racks |
| 7: AC | 8: Heat / Incubators | |

The wizard will configure the parameters of the equipment for the chosen application (see table "Default settings by application").

Information on our web site: www.akoelectromecanica.com
We reserve the right to supply materials which may be slightly different from those described in our Data Sheets. Updated information on our web site: www.akoelectromecanica.com

AKO ELECTROMECANICA, S.A.L.
 Av. Roldan 30-38
 Barrio La Pileta de Espinera
 Tel. (34) 938 142 700
 Fax (34) 938 934 054
akoe@akoe.com

35D142232 REV05.2014
 User Manual available at <http://www.akoelectromecanica.com/44pu/page/d/?barcode=AKOD00545>
 http://www.akoelectromecanica.com/44pu/page/d/?barcode=AKOD00545

www.akoelectromecanica.com

AKO

www.akoelectromecanica.com



6 - Table of parameters and messages

Def. column shows factory-set default parameters. Those marked with * are variable parameters depending on the application chosen in the wizard or the P3 parameter (see table "Default parameters by application"). If not indicated otherwise, the temperature values are in °C. (Equivalent values in °F)

AKO-D14312, AKO-D14320, AKO-D14323									
AKO-D14212, AKO-D14220, AKO-D14223									
AKO-D14112, AKO-D14123-2									
Level 1	Menus and description								
rE	Level 2	Control	Level 3	Description	Values	Min.	Def.	Max.	
	SP	Temperature Adjustment (Set Point) (limits depending on probe type)	With NTC (°C/F)	-50 (-58°F)	*	99 (210°F)	●	●	
			With PTC	-	150 (302°F)	●	●	●	
	C0	Calibrating probe 1 (Offset)	(°C/F)	-20,0	0,0	20,0	●	●	
	C1	Probe 1 differential (Hysteresis)	(°C/F)	0,1	2,0	20,0	●	●	
	C2	Upper blocking of the set point (cannot be set above this value)	With NTC (°C/F)	C3	99 (210°F)	99 (210°F)	●	●	
			With PTC	-	150 (302°F)	●	●	●	
	C3	Lower blocking of the set point (cannot be set below this value)	(°C/F)	-50 (-58°F)	-50 (-58°F)	C2	●	●	
	C4	Type of delay for protection of the compressor: 0=OFF/ON (since the last disconnection); 1=OFF/ON/OFF (since the last shut-down /start-up)		0	0	1	●	●	
	C5	Protection delay time (value of the option selected in parameter C4)	(min.)	0	0	120	●	●	
	C6	Status of COOL relay with probe fault: 0=OFF; 1=ON; 2=Average based on last 24 hours prior to probe fault; 3=ON/OFF as prog. C7 and C8		0	2	3	●	●	
	C7	Time relay ON in case of faulty probe (If C7=0 and C8=0, the relay will always be OFF deenergised)	(min.)	0	10	120	●	●	
	C8	Time relay OFF in case of fault of probe 1 (If C8=0 and C7=0, the relay will always be ON energised)	(min.)	0	5	120	●	●	
	C9	Maximum duration of fast freezing mode (0-off)	(h.)	0	24	48	●	●	
	C10	Change set point (SP) in fast freezing mode, when it reaches this point (SP + C10) returns to normal. (SP+C10>C3) (0=OFF)	(°C/F)	0	-50 (-58°F)	C3-SP	●	●	
	C11	Length of inactivity at digital input to activate ECO mode (Only if P10 or P11=1 and P0=0) (0=OFF)	(h.)	0	2	24	●	●	
	C12	Change set point (SP) in ECO mode (SP+C12 < C2) (0=off)	(°C/F)	0	2	C2-SP	●	●	
	EP	Exit to Level 1					●	●	
dEF	Level 2 DEFROST Control (if P0=0 Direct, Cold)								
	Level 3	Description	Values	Min.	Def.	Max.			
	d0	Defrost frequency (Time between two starts)	(h.)	0	*	96	●	●	
	d1	Maximum defrost duration (0=defrost deactivated)	(min.)	0	*	255	●	●	
	d2	Type of message during defrost: 0=Current temperature; 1=Temperature at start of defrost; 2=Display dEF message		0	2	2	●	●	
	d3	Maximum duration of message (time added at the end of the defrost)	(min.)	0	5	255	●	●	
	d4	Defrost end temperature (probe 2) (if P4 ≠ 1)	(°C/F)	-50 (-58°F)	8 (46°F)	99,9 (211°F)	●	●	
	d5	Defrost on equipment start-up 0=NO, First defrost as per d0, 1=YES, First defrost as per d6		0	0	1	●	●	
	d6	Defrost start delay on equipment start-up	(min.)	0	0	255	●	●	
	d7	Defrost type: 0=Resistors, 1=Inverted cycle, 2=Fan / air (In the two-relay equipment, P6 must be programmed to zero), 3=Compressor off		0	0	3	●	●	
	d8	Calculated time between defrost periods: 0=Total actual time; 1=Sum of times the compressor is on		0	0	1	●	●	
	d9	Drip time at end of defrost (compressor and fans off) (if P4 ≠ 1)	(min.)	0	1	255	●	●	
	EP	Exit to Level 1					●	●	
FAn	Level 2 FAN control (Evaporator) In 2-relay models P6 must be set to 0								
	Level 3	Description	Values	Min.	Def.	Max.			
	F0	Fan shut-down temperature as per probe 2 (if P4 ≠ 1)	(°C/F)	-50 (-58°F)	*	99,9 (211°F)	●	●	
	F1	Probe 2 differential (if P4 ≠ 1)	(°C/F)	0,1	2,0	20,0	●	●	
	F2	Stop fans when stopping compressor 0=No, 1=Yes		0	1	1	●	●	
	F3	Fan status during defrost: 0=Off; 1=On		0	*	1	●	●	
	F4	Starting delay after defrost (if F3=0) Will only operate if it is higher than d9	(min.)	0	3	99	●	●	
	F5	Stop fans on opening the door 0=No, 1=Yes (Requires a digital input configured as port P10 or P11=1)		0	0	1	●	●	
	EP	Exit to Level 1					●	●	
AL	Level 2 ALARMS control (visual)								
	Level 3	Description	Values	Min.	Def.	Max.			
	A0	Configuration of temperature alarms: 0=Relative to SP; 1=Absolute		0	0	1	●	●	
	A1	Maximum alarm probe 1 (must be greater than SP)	With NTC (°C/F)	99,9 (211°F)	99,9 (211°F)	●	●	●	
			With PTC	-	150 (302°F)	●	●	●	
	A2	Minimum alarm probe 1 (must be less than SP)	(°C/F)	-50 (-58°F)	-50 (-58°F)	A1	●	●	
	A3	Temperature alarm delay during start-up	(min.)	0	0	120	●	●	
	A4	Temperature alarm delay after completion of a defrost	(min.)	0	0	99	●	●	
	A5	Temperature alarm delay after reaching the value of A1 or A2	(min.)	0	30	99	●	●	
	A6	External alarm / Severe external alarm delay when receiving digital input signal (P10 or P11=2 or 3)	(min.)	0	0	120	●	●	
	A7	Deactivation delay of the external alarm / Severe external alarm when the signal of the digital input disappears (P10 or P11=2 or 3)	(min.)	0	0	120	●	●	
	A8	Show warning if defrost is terminated by time-out 0=No, 1=Yes		0	0	1	●	●	
	A9	Alarm relay polarity 0=Relay ON in alarm (OFF no alarm)		0	0	1	●	●	
	A10	Temperature Alarm Differential (A1 and A2)	(°C/F)	0,1	1,0	20,0	●	●	
	A12	Door open alarm delay (if P10 or P11=1)	(min.)	0	2	120	●	●	
	EP	Exit to Level 1					●	●	
CnF	Level 2 General status								
	Level 3	Description	Values	Min.	Def.	Max.			
	P0	Type of operation 0=Direct, Cold; 1=Inverted, Heat		0	*	1	●	●	
	P1	Delay of all functions on receiving electrical power	(min.)	0	0	255	●	●	
	P2	Access code (password) functions		0	0	2	●	●	
	P4	Selection of type of input 1=1 probe + 2 digital inputs; 2=2 probes + 1 digital input		1	1	2	●	●	
	P5	Address (only systems with built-in communications)		0	1	255	●	●	
	P6	Configuration of AUX relay 0=fan 1=defrost 2=alarm 3=light		0	1	3	●	●	
	P7	Temperature display mode 0=Whole in °C 1=One decimal in °C 2=Whole in °F 3=One decimal in °F		0	1	3	●	●	
	P8	Probe to be displayed (as per parameter P4) 0=visualization of all the probes in sequence; 1=Probe 1; 2=Probe 2; 3=Probe 3 (1)		1	1	2	●	●	
	P9	Selection of probe type 0=NTC; 1=PTC		0	0	1	●	●	

AKO-D14312, AKO-D14320, AKO-D14323											
AKO-D14212, AKO-D14220, AKO-D14223											
AKO-D14112, AKO-D14123-2											
Level 1	Menus and description										
P10	Configuring digital input 1 0=Off 1=Door contact 3=Severe external alarm 4=Slave defrost 6=Act. Fast Freezing 9=Act. ECO mode by switch	1=Door contact 2=External alarm 5=Act. ECO mode by pushbutton 8=Remote defrost	0	0	9	●	●	●			
P11	Configuring digital input 2 0=Off 1=Door contact 3=Severe external alarm 4=Slave defrost 6=Act. Fast Freezing 9=Act. ECO mode by switch	2=External alarm 5=Act. ECO mode by pushbutton 8=Remote defrost	0	0	9	●	●	●			
P12	Digital input polarity 1=0=Energised on closed contact, 1=Energised on open contact	0=0 1=1	●	●	●	●	●	●			
P13	Digital input polarity 2=0=Energised on closed contact, 1=Energised on open contact	0=0 1=1	●	●	●	●	●	●			
P19	Lights in ECO Mode (P6=3)=ON; 1=OFF	0=0 1=1	●	●	●	●	●	●			
EP	Exit to Level 1						●	●			
tid	Level 2 Access and information control										
Level 3	Description						Values	Min.	Def.	Max.	
L5	Access code (Password)						0	-	99	●	●
PU	Program version (Information)							-		●	●
Pr	Program revision (Information)							-		●	●
EP	Exit to Level 1									●	●
EP	Exit Programming									●	●
	WARNING: The default parameters by type of application have been defined for the most common applications. Check that these parameters are suitable for your installation.										
DEFAULT SETTINGS BY APPLICATION (In)											
SP	Multipurpose	1 2 (35,6°F)	-18 (-0,4°F)	10 (50°F)	0 (32°F)	3 (37,4°F)	12 (53,6°F)	21 (69,8°F)	37 (98,6°F)		
d0		4	4	4	4	24	24	96	-		
d1		20	20	20	20	20	20	0	-		
F0		8 (46°F)	0 (32°F)	30 (86°F)	8 (46°F)	8 (46°F)	30 (86°F)	99 (210°F)	-		
F3		1	0	1	1	1	1	1	-		
P0		0	0	0	0	0	0	0	0		
MESSAGES											
L5	Access code (Password) request								D		
dEF	Indicates a defrost is underway. (Only if parameter d2=2)								D		
E1	Probe 1 faulty (open circuit, crossover, NTC: temp. >99°C or <-50°C - (equivalent limits in °F)								D A		
E2	Probe 2 faulty (open circuit, crossover, NTC: temp. >99°C or <-50°C - (equivalent limits in °F)								D A		
AH	Flashing: maximum temperature alarm on probe 1 (A1)								D A		
AL	Flashing: minimum temperature alarm on probe 1 (A2)								D A		
AE	External alarm activated (only if parameter P10 or P11=2)								D A		
AES	Severe external alarm activated (only if parameter P10 or P11=3)								D A		
Adt	Defrost time-out alarm (only if parameter A8=1)								D		
PAb	Door open alarm (Only if P10 or P11=1 and as per time at A12)								D		
	D: Displays the message on the display, A: Activates the alarm relay (if available).										
7- Technical specifications											
Power supply	AKO-D14112.....								12/24V ≈ ±20% 2.5VA		
	AKO-D14123-2								230V ~ ±10% 50/60 Hz 3.5VA		
	AKO-D14220/D14320/D14120-2								120V ~ +8% -12% 50/60 Hz 4VA		
	AKO-D14223/D14323.....								230V ~ ±10% 50/60 Hz 3.75VA		
	AKO-D14122/D14312.....								12V ≈ ±20% 2VA		
Maximum Voltage SELV circuits									20V		
Inputs (According to P4)									2 input NTC/PTC + 1 digitised input		
									1 input NTC/PTC + 2 digitised input		
Relay COOL	AKO-D14123-2 2 CV								(EN60730-1: 16(10)A 250V ~)		
	Other models 16 A								(EN60730-1: 12(9)A 250V ~)		
Relay FAN 6 A									(EN60730-1: 5(4)A 250V ~)		
Relay AUX 8 A									(EN60730-1: 8(4)A 250V ~)		
Number of relay operations									EN60730-1: 100,000 operations		
Types of probe									NTC AKO-149xx / PTC AKO-1558		