

LCD DIGITAL HYGRO-THERMOMETER

FEATURE

- °F/°C FUNCTION
- EASY TO READ JUMBO DISPLAY
- COMFORTABLE AND UNCOMFORTABLE INDEX (COMFORT/WARM/COOL)
- MINIMUM AND MAXIMUM MEMORY RECALLING FUNCTION
- ALARM/SNOOZE SET
- 12/24 HOUR FORMAT
- FLIP OUT STAND AT BACK OF UNIT
- 3 METERS EXTENSION WIRE WITH SENSOR
- 2 X 1.5 VOLTS AA SIZE OR EQUIVALENT BATTERIES
- 2 X 1.5 VOLTS AAA SIZE OR EQUIVALENT BATTERIES
- 2 X 1.5 VOLTS A76 SIZE (LR44, G13) OR EQUIVALENT BATTERIES

SPECIFICATION

MEASUREMENT RANGE:	-50°C ~ +70°C OR -58°F ~ +158°F / 20% ~ 99.9% R.H (NO CONDENSATION)
ACCURACY:	±1.0°C OR ±1.8°F IN THE RANGE OF 0°C ~ +50°C OR +32°F ~ +122°F, OTHERWISE MORE THAN ±1.0°C OR ±1.8°F
RESOLUTION:	0.1° FOR WHOLE RANGE / 0.1% R.H FOR WHOLE RANGE
AMBIENT TEMPERATURE FOR PLASTIC CASE:	0°C ~ +50°C OR +32°F ~ +122°F

OPERATION

OPEN THE BATTERY DOOR, INSERT BATTERY(IES) INTO COMPARTMENT. CLOSE THE BATTERY DOOR. THE UNIT IS READY FOR USE NOW.

ON/OFF

1. PRESS "ON/OFF" TO SWITCH ON THERMOMETER AND PRESS AGAIN TO SWITCH OFF.
2. **WARM, COMFORT** OR **COOL** SIGN APPEARS AT APPROPRIATE TEMPERATURE AND HUMIDITY.

IN/OUT

1. PRESS "IN/OUT" TO DISPLAY OUTDOOR MEASUREMENT. **OUT** SIGN APPEARS.
2. PRESS AGAIN TO DISPLAY INDOOR MEASUREMENT. **IN** SIGN APPEARS.

°F/°C

1. PRESS "°F/°C" TO SELECT DESIRED TEMPERATURE UNIT.

MAX/MIN

1. PRESS "MAX/MIN" TO RECALL MAXIMUM TEMPERATURE. **MAX** SIGN SHOWS ON THE DISPLAY.
2. PRESS AGAIN TO RECALL MINIMUM TEMPERATURE WHEN NECESSARY. **MIN** SIGN SHOWS ON THE DISPLAY.
3. UNIT RESTORES TO REAL TIME TEMPERATURE MODE AUTOMATICALLY AFTER 5 SECONDS.
4. PRESS AND HOLD FOR 3 SECONDS TO CLEAR ALL MAXIMUM AND MINIMUM READING AT ONCE.

12/24 HOUR FORMAT

1. PRESS "12/24" TO SELECT DESIRED TIME FORMAT.

TIME SET

1. PRESS "SET" OR "SET TIME" FOR 3 SECONDS TO ENTER TIME SETTING MODE. DIGITS AT THE LOWEST ROW FLASH.
2. PRESS "HR" OR "HOUR", AND "MIN" OR "MINUTE" RESPECTIVELY TO ADJUST DESIRED TIME.
3. PRESS "SET" OR "TIME SET" TO RETURN TO REAL TIME MODE. OR UNIT RETURNS TO REAL TIME MODE AUTOMATICALLY AFTER 5 SECONDS.

ALARM/SNOOZE SETTING

1. PRESS "AL/SNZ" AND HOLD UNTIL **AL** SIGN APPEARS. AND **0:00** (HH:MM) OR LAST SETTING SHOWS.
2. PRESS "HR" OR "HOUR", AND "MIN" OR "MINUTE" RESPECTIVELY TO ADJUST DESIRED ALARM TIME.
3. PRESS "AL/SNZ" AGAIN TO ACTIVATE THE ALARM AND **🔔** SIGN APPEARS. THE ALARM IS ON ONLY WHEN **🔔** SIGN APPEARS.
4. PRESS "AL/SNZ" AGAIN TO ACTIVATE THE SNOOZE AND **SNZ** SIGN APPEARS. THE SNOOZE IS ON ONLY WHEN **SNZ** SIGN APPEARS.
5. PRESS "SET" OR "TIME SET" AFTER SETTING DESIRED ALARM TIME. OR UNIT RETURNS TO REAL TIME MODE AUTOMATICALLY AFTER 5 SECONDS.
6. WHEN THE SET ALARM TIME REACHES, **🔔** SIGN FLASHES AND THE ALARM SOUND WILL LAST FOR 1 MINUTE.
7. PRESS ANY KEY TO STOP THE ALARM.
8. WHEN THE SNOOZE IS ON, **SNZ** SIGN FLASHES AND THE ALARM SOUND WILL LAST FOR 1 MINUTE AFTER 10 MINUTES OF ALARM TIME. THE SNOOZE SOUNDS WILL REPEAT 5 TIMES.
9. TO TURN OFF THE ALARM, PRESS "AL/SNZ" AND HOLD UNTIL **AL** AND **🔔** SIGN APPEAR. PRESS "AL/SNZ" AGAIN AND **🔔** SIGN DISAPPEARED. THE ALARM IS OFF WHEN **🔔** SIGN DISAPPEARED.