

## CODE SOFTWARE (in case of exchanging the board 215032)

In case that you replace the main board, when you switch on the machine, the display ask you the code of the machine

The code of the machine is printed in a white label next the main board.

Insert the number with the start cycle button and push and hold the ON/OFF button until the display switch OFF

If the machine doesn't ask a key please enter in the second level parameter and insert it, the first parameter is the software code

To enter in the second level menu the machine must be OFF with door Open, push and hold all the three button until the display ask a key, with the start cycle button select the number 24, now push the ON/OFF button to enter.

The first parameter is the code of the machine, please insert the correct number with the start cycle button, push the ON/OFF button to confirm.

To exit push and hold the ON/OFF button for five seconds

# 2° Menu (Safety Parameters Menu)

