

RTS

Installation Instruction No.:

03A/99

Subjekt: Pulse divider

Date: 16.03.1999

Att: Service department

To install the delivered fan motor in a unit with humidity control manufactured prior to 01st of February 99, it is necessary to connect the output wires of the hall sensors via a pulse divider.

1. Remove defect fan motor
2. Disconnect wires brown/white/green from multipoint connector X9 terminals 8/9/10 of the CPU pcb. Afterwards isolate single cables
3. Install new fan motor.
4. Connect wires **red, black and brown** of the Hall sensor to wires **red, black and brown** (use insulating screw joint) of pulse divider.
- 5 Connect wires brown/white/green to multipoint connector X9 of the CPU pcb:
Wire **brown** to **X9** terminal **8**
Wire **white** to **X9** terminal **9**
Wire **green** to **X9** terminal **10**

