

**Ogg.: - SOSTITUZIONE DEL COMMUTATORE "EGO" CON "DREEFS" IMPIEGATO SULLA GAMMA DELLE APPARECCHIATURE FCV LIVELLI FUNZIONALI 2-3 E SUPPORTI ARMADIATI CALDI:  
Mod. 240 100...240 155, 697 804...697 821, 724 242...724253, 922112...922 168.**

Informiamo che, l'attuale commutatore tipo EGO, c.r. **02661** sarà disponibile fino ad esaurimento scorte di magazzino, dopo verrà sostituito dal tipo DREEFS identificato con lo **stesso codice ricambio**.

L'intercambiabilità è possibile prestando attenzione ai riferimenti dei contatti dei terminali riportati nella Tab.1 e cioè il connettore che terminava al concontatto **P1(A)** (EGO) ora viene connesso al contatto **5**(DREEFS) e il connettore che terminava su **1(A)**(EGO) ora viene connesso al contatto **5a** (DREEFS) e così per gli altri contatti.

Nella Tab.2 sono raffigurate le attivazioni dei contatti in relazione al posizionamento del commutatore:

**Pos. Funzione**

- 0 Macchina disinserita
- 1 Ciclo Convezione
- 2 " Misto
- 3 " Vapore
- 4 " Vapore termostatoato (dove presente)
- 5 " Rigenerazione (dove presente)
- 6 " (non utilizzata)

**Ref.: - REPLACEMENT OF "EGO" WITH "DREEFS" COMMUTATOR, USED UPON FCV FUNCTIONAL LEVEL 2-3 OVENS AND HEATED CUPBOARD SUPPORT:**


**Mod. 240 100...240 155, 697 804...697 821, 724 242...724253, 922112...922 168.**

We inform You that actual commutator type EGO , s.p.n. **02661** will be available untill it runs out of stock. Then it will be replaced by type DREEFS **taking same part number**.

The interchangeability is possible by paing attention to the terminal matching referencies described on Tab. 1, eg wire connecting **P1(A)** (EGO) has to be placed on terminal **5** (DREEFS) and wire connecting **1(A)**(EGO) has to be placed on terminal **5a** (DREEFS). Same procedure has to be followed connecting other terminals.

On Tab.2 are described contacts actuation in relation to the commutator setting.

- Setting Function**
- 0 Unit OFF
  - 1 Convection cycle
  - 2 Moist cycle
  - 3 Sat steam cycle
  - 4 Thermostatically controlled steam cycle (when considered)
  - 5 Regenerating cycle (when considered)
  - 6 (not used)

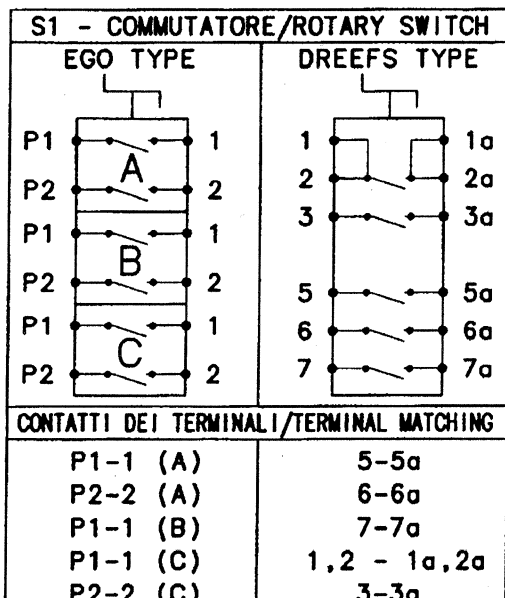

Contatti dei terminali  
Terminal matching

	1-2	3	4	5	6	7
	1a-2a	3a	4a	5a	6a	7a
0						
1	X	X		X	X	X
2	X	X		X	X	
3	X	X		X		
4	X	X		X		X
5	X	X			X	X
6	X	X				X

Posizionamenti commutatore  
Commutation setting