


## ST121-JA1TA.10

Temperature controller



## Wiring diagram

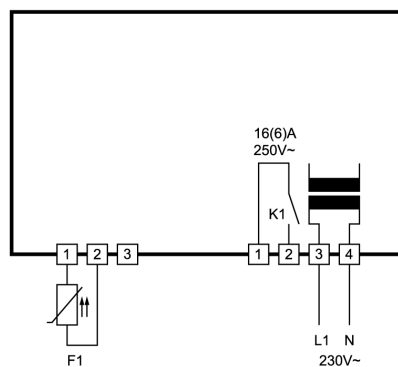

## Product description

The controller ST121-JA1TA.10 was specifically developed for direct switching at high performances. Given the high maximum electric load of 16A (ohm) and 6A (inductive) it can operate without cut-out relay in many cases. The controller is supplied with 230V AC and has 4 keys. Three of them serve for controller adjustments, the fourth key activates the standby function.

**Sensor:** multi-resistance input

**Range:** dependent on type of sensor





**Front size:** 120mm x 42mm

**Panel cut-out:** 102,5mm x 35mm

**Tightness:** front IP65

**Connector:** screw terminal

ST 121...

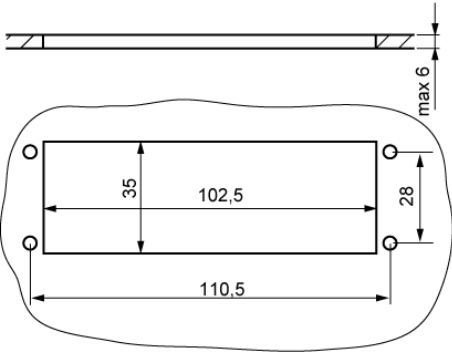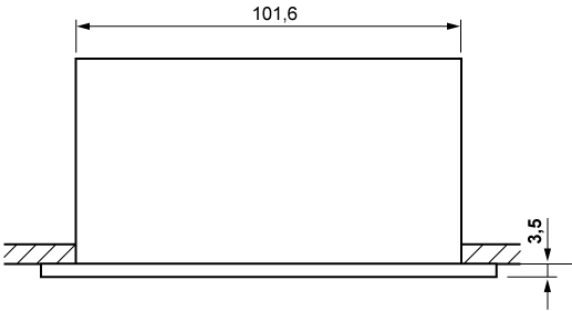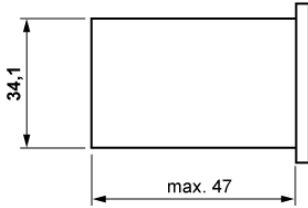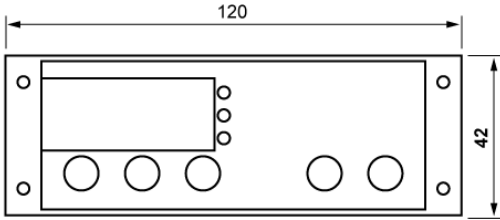

## SOFTWARE .10

### Adjustment options



#### **Key 1: UP**

Pressing this key you can increase the parameter or parameter value or scroll the parameter list.



#### **Key 2: DOWN**

Pressing this key you can decrease the parameter or parameter value or scroll the parameter list. At alarm the buzzer function can be switched off with this key.



#### **Key 4: SET**

While SET key is pressed, the setpoint is indicated.  
In addition, the SET key is used for setting parameters



#### **Key 5: Standby**

Switching the controller on or off.

### First control level:

#### **Parameter setting of the control setpoint**

If none of the keys is pressed, the display indicates the actual value of the temperature. Pressing the SET key, the setpoint shows on the display.

If the setpoint is to be changed, the SET key is to be kept pressed while adjusting the setpoint with the keys UP and DOWN.

Please note that the setpoint can only be changed within the set setpoint limits.

With appropriate parameter settings (see A85, A86) a second setpoint S1' can be activated with a special key A or B (if available).

The setpoint S1' can be adjusted in the same way. If setpoint S1' is activated it is indicated and relevant for the control.

Parameter	Function description	Adjustment range	Standard setting	Custom setting
<b>S1</b>	Setpoint	P4...P5	0.0°C	
<b>S1'</b>	Setpoint S1' (relative) Setpoint S1' (absolute)	-99...+99.9 K if A33=1 P4...P5, if A33=2	0.0°C/K	

### Second control level (P parameters):

#### Setting of control parameters

Simultaneously pressing the UP and DOWN key for at least 4 seconds opens a parameter list containing control parameters.

With the UP and DOWN keys the list can be scrolled in both directions.

Pressing the SET key will give you the value of the respective parameter. Pressing also the UP or DOWN key at the same time the value can be adjusted.

Return to the initial position takes place automatically, if no key is pressed for 60 seconds.


Parameter	Function description	Adjustment range	Standard setting	Custom setting
P0	Actual measuring value	-	-	
P2	Hysteresis contact K1	0.1... 99.9 K	1.0 K	
P4	Control range limitation – minimum setpoint	-99°C...P5	-99°C	
P5	Control range limitation – maximum setpoint	P4...999°C	999°C	
P6	Actual value correction	-20.0...+20.0 K	0.0 K	
P19	Key-lock	0: no key-lock 1: key-lock	0	
P30	Lower alarm value	-99 ... 999°C/K	-99°C	
P31	Upper alarm value	-99 ... 999°C/K	100°C	
P32	Hysteresis alarm circuit	0.1... 99.9 K	1.0 K	
d0	Defrosting interval	1...99 hours 0: no defrosting	8 h	
d2	Defrosting temperature	-99 ...999 °C	10.0 °C	
d3	Defrosting time limit	1...99 min 0: without time limit	30 min	

### Parameter description:


#### P2: Hysteresis contact K1

The hysteresis can be set symmetrically or one-sided at the setpoint (see A40, A41).

At one-sided setting, the hysteresis works downward with heating contact and upward with cooling contact. At symmetrical hysteresis, half of the hysteresis' value is effective below and half of the value above the switching point (see fig. 1 and 2).

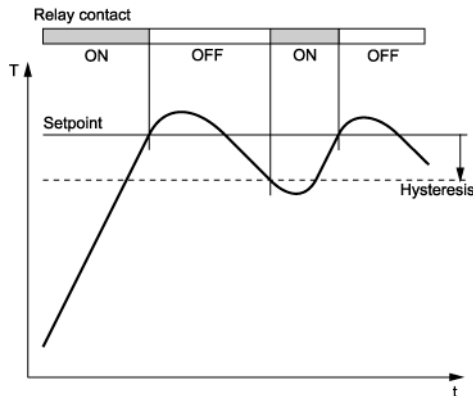

**Fig. 1:** Heating controller, one-sided hysteresis

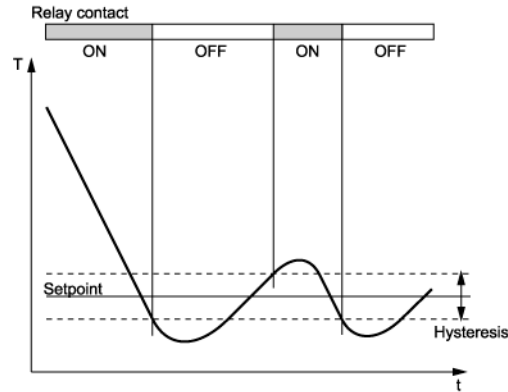

**Fig. 2:** Cooling controller, symmetrical hysteresis

#### P4: Control range limitation – minimum setpoint

#### P5: Control range limitation – maximum setpoint

The adjustment range of the setpoint can be limited in both directions. This is to prevent the end user of a unit from setting inadmissible or dangerous setpoints.

#### P6: Actual value correction

This parameter allows the correction of actual value deviations caused for example by sensor tolerances or extremely long sensor lines. The regulation measure value is increased or decreased by the here adjusted value.

#### P19: Key-lock

The key-lock allows blocking of the control keys. In locked condition parameter adjustments with keys is not possible. At the attempt to adjust the parameters despite key-lock the message "===" appears in the display.

#### P30: Lower alarm value

#### P31: Upper alarm value

The exit alarm is a boundary alarm or a range alarm with symmetrical hysteresis (see parameter P32). Both at the boundary alarm and the range alarm, limit values can be relative, i.e. going along with the setpoint, or absolute, i.e. independent of the setpoint. At boundary alarm the hysteresis works one-sided inwardly, and at range alarm outwardly.

#### P32: Hysteresis alarm circuit

Hysteresis is set one-sided at the adjusted limit value. It becomes effective depending on alarm definition.

#### d0: Defrosting interval

The "defrosting interval" defines the time, after which a defrosting process is started. After each defrosting start, this time is reset and runs the next interval.

**d2: Defrosting temperature limit**

This permits to terminate defrosting when the adjusted desired temperature value is reached. The defrosting time set with "d3" nevertheless runs at the same time, i.e. it functions as safety net to terminate the defrosting process in case the defrosting temperature is not reached.

**d3: Defrosting time limit**

After the here set time the defrosting process is terminated.

### Third control level, (A parameters):

#### Setting of control parameters

Access to the third control level is granted when selecting the last P-parameter on the second control level. Continue to press the UP key for approximately 10 seconds until "PA" appears. Continue to press the UP key and additionally press the DOWN key for about 4 seconds and the first A-parameter of the third control level is indicated.

With the keys UP and DOWN you can scroll the list in both directions. Pressing the SET key will give you the value of the respective parameter. By pressing the UP or DOWN key at the same time the value can be adjusted.

Return to the initial position takes place automatically, if no key is pressed for 60 seconds, or by simultaneously pressing the UP and DOWN key for approx. 4 seconds.

Parameter	Function description	Adjustment range	Standard setting	Custom setting
<b>A1</b>	Switch mode contact K1	0: heating contact 1: cooling contact 2: function alarm K1	0	
<b>A3</b>	Function of contact K1 at sensor error	0: relay off 1: relay on	0	
<b>A8</b>	Display mode (all parameter indications are presented in 0.1°K)	0: integrals 1: decimals in 0.5°C 2: decimals in 0.1°C	1	
<b>A19</b>	Parameter lock	0: no lock 1: A-parameter locked 2: A- and P-parameter locked	0	
<b>A30</b>	Function alarm exit	0: Boundary alarm, relative 1: Boundary alarm, absolute 2: Range alarm, relative 3: Range alarm, absolute 4: Boundary alarm, relative, inverted alarm contact 5: Boundary alarm, absolute, inverted alarm contact 6: Range alarm, relative, inverted alarm contact 7: Range alarm, absolute, inverted alarm contact	0	
<b>A31</b>	Special function at boundary or range alarm	0: no special function 1: flashing display 2: buzzer 3: flashing display and buzzer 4: like 3, buzzer can be cancelled 5: like 4, buzzer restarts after 10 min. 6: like 4, buzzer restarts after 30 min	0	
<b>A32</b>	Setpoint display	0: display shows actual value 1: display shows setpoint S1 (S1')	0	
<b>A33</b>	Type of setpoint S1'	0: not activated 1: relative to setpoint S1 2: absolute (freely adjustable)	0	
<b>A40</b>	Hysteresis mode contact K1	0: symmetrically 1: one-sided	1	

Parameter	Function description	Adjustment range	Standard setting	Custom setting
<b>A50</b>	Minimum action time contact K1 "On"	0...600 sec.	0 sec.	
<b>A51</b>	Minimum action time contact K1 "Off"	0...600 sec.	0 sec.	
<b>A54</b>	Delay after "Power-on"	0...600 sec.	0 sec.	
<b>A56</b>	Alarm suppression after "Power-On"	0...60 min.	0 min.	
<b>A60</b>	Sensor type	11: Pt100 2-wire 21: PTC 22: Pt1000 2-wire	11	
<b>A70</b>	Software filter	1: inactive 2...32: average value with 2...32 measuring values	4	
<b>A80</b>	Temperature scale and display when in Standby-Mode	0: Fahrenheit ("AUS") 1: Celsius ("AUS") 2: Fahrenheit ("OFF") 3: Celsius ("OFF")	1	
<b>A85</b>	Function key A (if available)	0: no function 1: indicate actual value (if A32=1) 2: activate setpoint S1' (if A33>0)	0	
<b>A86</b>	Function key B (if available)	0: no function 1: indicate actual value (if A32=1) 2: activate setpoint S1' (if A33>0)	0	
<b>A87</b>	Function standby key	0: no function 1: controller On/Off (Standby), same condition after connecting mains 2: like 1, always off after connecting mains 3: like 1, always on after connecting mains	1	
<b>A88</b>	Delay for standby ON	0.1 ... 3.0 sec.	0.1 sec.	
<b>A89</b>	Delay for standby OFF	0.1 ... 3.0 sec.	0.1 sec.	
<b>Pro</b>	Program version	-	-	



## Parameter description:

*The following values can change the equipment characteristics and are therefore to be set with utmost care.*

### **A1: Switch mode contact K1**

The switch mode for the relay, i.e. cooling or heating function, can be programmed independently at works. Heating function means that the contact opens as soon as the setpoint is reached, thus power interruption. At cooling function the contact closes, if the actual value is above the required setpoint. (see fig. 1 + 2)

### **A3: Function of contact K1 at sensor error**

At sensor error the relay falls back into the condition pre-set here. If there is a data-loss in parameter memory (display indicates "EP") both contacts K1 and K2 are switched off.

### **A8: Display mode**

The value can be indicated in integrals or with decimals in 0.5°K or 0.1°K. At indication in 0.5°K the value is rounded up or down. In general, all parameter indications are presented in 0.1°K.

### **A19: Parameter lock**

This parameter enables locking of each parameter level. If third level is locked, only parameter A19 may be changed.

### **A30: Function alarm exit**

The alarm exit evaluates an upper and a lower limit value (see parameters P30 and P31), whereas a selection is possible as to whether the alarm is active if the temperature lies within these two limits, or whether the alarm is released if the temperature lies beyond them. In the case of sensor error, the alarm is activated independently of this adjustment (see fig. 3 – 4 at parameters P30/31).

### **A31: Special function at boundary or range alarm**

Here can be selected whether, in the case of an alarm, the indication to flash and/or the buzzer is to start. Sensor alarm (display F1L or F1H) is indicated independently thereof by flashing display and the buzzer.

### **A32: Setpoint display**

A32=0 indicates the actual value, A32=1 statically indicates the setpoint S1 or S1' in the display. Therefore, the current actual value can only be indicated with parameter P0.

### **A33: Adjustment of setpoint S1' (not available on all types of controllers)**

By closing switching input E1, setpoint S1 can be switched to a setpoint S1'. Setpoint S1' can be either relative to setpoint S1 or an independent, freely adjustable, control setting. The setpoint S1' can only be accessed if input E1 is closed. The setpoint S1' can only be activated, if the external input is configured for setpoint change-over (parameter A81=2).

### **A40: Hysteresis mode contact K1**

These parameters allow selection as to whether the hysteresis value which is adjustable with P32, is set symmetrically or one-sided at the respective switching point. At symmetrical hysteresis, half of the hysteresis' value is effective below and half of the value above the switching point. The one-sided hysteresis works downward with heating contact and upward with cooling contact (see fig. 1 + 2).

**A50: Minimum action time contact K1 "On"****A51: Minimum action time contact K1 "Off"**

These parameters permit a delay in switching on/off the relay in order to reduce the switching frequency. The adjusted time sets the entire minimum time period for a switching-on or switching-off phase.

**A54: Delay after "Power-on"**

This parameter allows a switching-on delay of relays after switching-on the mains voltage. This delay corresponds with the time set here.

**A56: Alarm suppression after "Power-On"**

This parameter allows a switching-on delay of the alarm contact after switching on the mains voltage or setpoint change-over. This delay corresponds with the time set here.

**A60: Sensor type**

These parameter permits selection of the sensor type, if the needed hardware prerequisites are available.

**A70: Software filter**

With several measuring values, it is possible to obtain an average value. This parameter can determine by how many measured values an average value is to be formed. If a sensor with a very fast reaction to external influences is used, an average value ensures a calm signal process.

**A80: Temperature scale**

Indication can be switched between Fahrenheit and Celsius. At conversion, the parameters and setpoints maintain their numerical value and adjustment range. (Example: A controller with the desired value of 0°C is switched to Fahrenheit. The new desired value is then interpreted as 0°F, which corresponds to a temperature of -18°C).

NOTE: Indication limits with °F can be smaller than the actual measuring range!

**A85 Function key A****A86 Function key B**

0: no function

1: actual value will be indicated if A32=1, otherwise no function

2: Setpoint S1 is switched to setpoint S1' (see A33)

**A87: Function standby key**

The following functions are available:

0: the respective key has no function

1: the controller is switched to standby mode

**A88: Delay for Standby ON****A89: Delay for Standby OFF**

For switching the controller on and off, a delay for the Standby key can be defined here.

### Status messages

Message	Cause	Error elimination
<b>“AUS” or “OFF”</b>	Standby modus, no regulation	Switch on with standby key
<b>F1L</b>	Sensor error, short-circuit at sensor F1	Check sensor
<b>F1H</b>	Sensor error, open-circuit at sensor F1	Check sensor
— — —	Key-lock active	Change parameter P19 or A19
<b>display flashes</b>	Temperature alarm at too high or too low temperature (if activated) see A31	
<b>Buzzer</b>	Temperature alarm at too high or too low temperature (if activated) see A31	The buzzer function can be switched off with the DOWN-key
<b>EP, display flashes</b>	Data loss at parameter memory (Contacts K1 and K2 are switched off)	If error cannot be eliminated by switching on/off, the controller must be repaired

## Technical data of ST121-JA1TA.10

### Measuring input

**F1:** Resistance sensor PTC, Pt100 or Pt1000, 2-wire connection

Measuring range:	Pt100	-80°C...+400 °C
	Pt1000	-99°C...+350°C
	PTC	-50°C...+150 °C

Measuring accuracy of the controller at 25°C: +/-0.5K und +/-0.5% of measuring range

### Outputs

**K1:** Relay, normally-open contact, 30(6)A 250V~,  
permanent current max. 16(6)A, limited by connectors and/or conductive strips

Additional buzzer, 85dB

### Display

One 3-digit LED-Display, height 13 mm, colour red

1 LED-Lampe, diameter 3mm, colour red, for status display of output K1

### Power supply

230V~ 50/60 Hz, power consumption max. 5 VA

### Connectors

screw terminals

X1: 3-pole, spacing 5.0 mm, for cable up to 2.5 mm<sup>2</sup>

X2: 4-pole, spacing 5.0 mm, for cable up to 2.5 mm<sup>2</sup>

### Ambient conditions:

Storage temperature: 20...+70°C

Operating temperature: 0...+55°C

Relative humidity: max. 75% without dew

### Weight

ca. 300 g, without sensor

### Enclosure

Front IP65, IP00 from back

### Installation data

Front size: 120 x 42 mm

Panel cut-out: 102.5 x 35 mm

Installation depth: max. 47mm